

ASSEMBLY - MINI SPEED CONTROL BOX

- * The Speed Control Box is not waterproof. Before washing your trimmer, remove the control box using the wing nuts and quick disconnect cable.
- * The Speed Control Box comes wih a 2 years warranty.
- * Make sure the machine is unplugged.

STEP 1

REMOVE BELT COVER.

5/32" T-HANDLE ALLEN WRENCH.

STEP 2

USE A PRYBAR OR SCREW-DRIVER TO REMOVE BELT FROM PULLEYS.

TO AVOID DAMAGE, DO NOT PRY AGAINST BEARING.

STEP 3


REMOVE THE MOTOR BY REMOVING THE FOUR MOUNT BOLTS.


5/16" T-HANDLE ALLEN WRENCH.

STEP 4

REMOVE SWITCH BOX BY USING AN ALLEN WRENCH TO REMOVE THE TWO MOUNT SCREWS.

5/32" T-HANDLE ALLEN WRENCH.

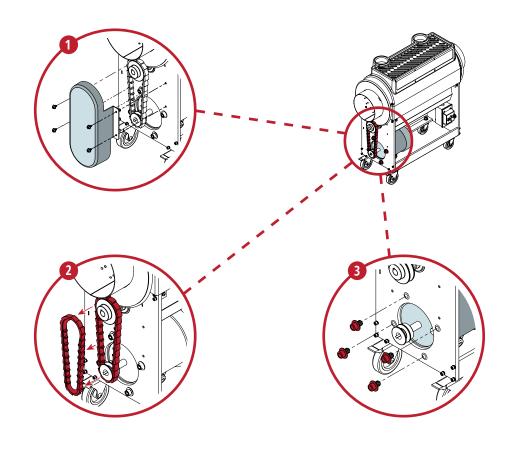

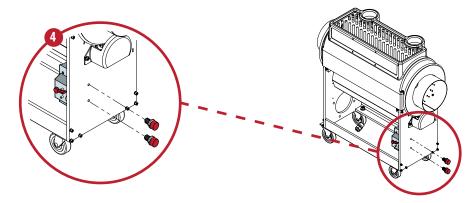

Œ	SIZE	TOOL ITEM
REQUIRED	5/32"	T-Handle Allen Wrench
TOOLS	5/16"	T-Handle Allen Wrench







ASSEMBLY - MINI SPEED CONTROL BOX

STEP 5

INSTALL NEW MOTOR WITH NEW PULLEY USING THE FOUR MOUNT BOLTS.

5/16" T-HANDLE ALLEN WRENCH.

STEP 6

INSTALL THE CONTROL BOX WITH THE SAME 2 HOLES USED TO MOUNT THE SWITCH BOX, WITH 2 NEW SCREWS AND WING NUTS. ORIENTATE CONTROL BOX AS SHOWN.

5/32" T-HANDLE ALLEN WRENCH.

STEP 7

INSTALL THE NEW BELT ONTO THE PULLEYS USING A PRY-BAR OR SCREWDRIVER. ADJUST PULLEY ALIGNMENT SO THAT BELT RUNS STRAIGHT.

TO AVOID DAMAGE, DO NOT PRY AGAINST BEARING.

STEP 8

CONNECT THE CONTROL BOX TO THE MOTOR.

STEP 9

RE-INSTALL BELT COVER.

5/32" T-HANDLE ALLEN WRENCH.

